

Items to prepare

- Attached document (Showing UID and password)
- G-cam main unit
- Smartphone or tablet

Download the “CamHi” app from one of the following apps.



iOS users
“App Store”



Android users
“Google Play Store”

“CamHi”



- G-cam can be operated and viewed from a smartphone or tablet.

(1) Select “+ Add Camera”.

- Register the G-cam in the “CamHi” app.
- Tap the “CamHi” app.
- Tap “+ Add Camera” from the Camera page.

カメラ 編集



Tap here.




The desired name can be registered.

(2) Registering camera

Enter the UID.

- Tap on Scan QR Code.

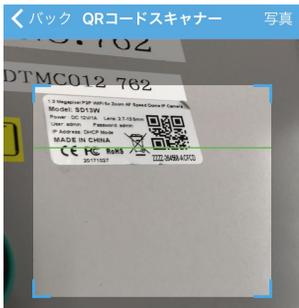

- Scan the QR Code on the side of the camera.



After entering the data, tap here.



Register the camera's UID.



Input the password provided on the attached document.

- When QR Code can not be read in

Select UID, and then directly input the UID on the attached document.

* When UID cannot be input:



Depending on the smartphone model you are using, unintended characters may be entered when you enter characters using the numeric keypad. Characters can be input correctly by using a QWERTY layout keypad.

QWERTY layout keypad

Input the password.

Input the password provided on the attached document.

Input the camera name.

Register the desired name.

Tap Done.

Registration is completed by tapping “Done” at the upper right.

(3) Confirming the video


- Use the following method to confirm the video from a registered camera.



- Confirm that the registered camera is online.



- Tap the video to be viewed.

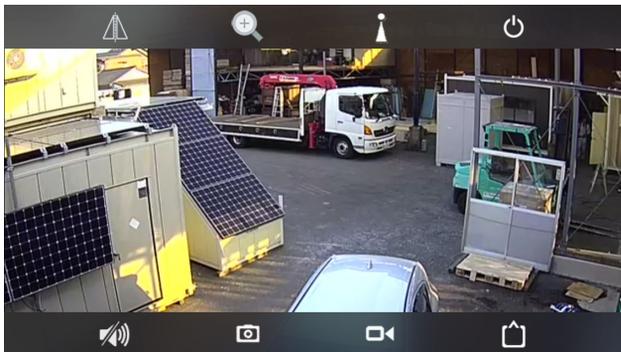


- Live video can be confirmed.

*** The registered camera can't be taken online!**

The following symptoms may be the cause.

Display	Symptom
Not connected	The camera's power is not on. The camera might be located in an area with unstable communication or where communication is not possible.
Connected	Connect to G-cam. If it takes a long time, restart the app.
Incorrect password	Check the password and input it again.

(4) Operation methods

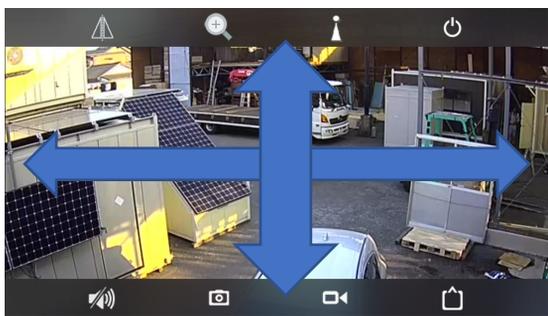


- Slide a finger across the screen.

The camera can be moved up, down, left, and right.

- Range of motion

Horizontal travel: 355°
Vertical direction: 90°

Explanation of the screen

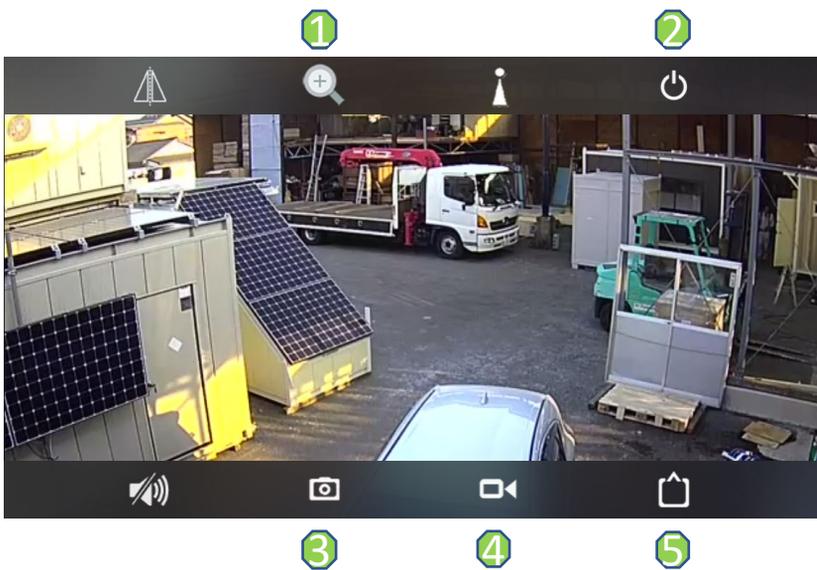


- Tap this to zoom in or out and adjust the focus.
- Tap this to return to the camera list.
- Tap this to take a snapshot.
The saved data can be confirmed with "Pictures".
- Tap this to record the image in the D+CUBE unit.
The saved data can be confirmed with "Video".
- Tap this to change the screen quality.
HD quality / SD quality

(5) Saving images in the D+CUBE unit.

- The images viewed with the smartphone or tablet can be captured (saved as a screenshot). The captured data can be stored in the D+CUBE unit.

Capturing a video

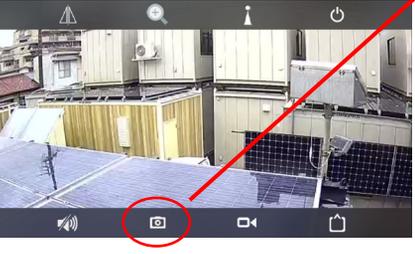

- Tap the "Camera" icon.



- The message "Snapshot saved" appears.


Confirming captured data



- Tap the "Picture" icon. Select the camera used to capture the picture. (In this example, a picture from the Headquarters camera will be confirmed.)




- Select the captured data.

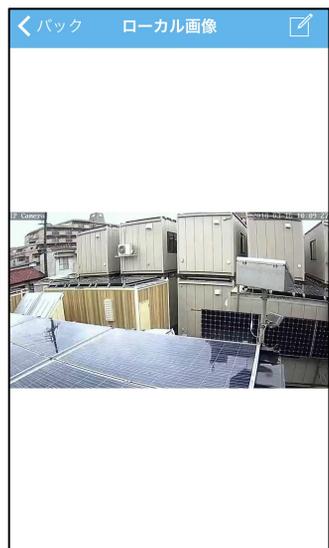

- The selected data is displayed.

Viewing the captured pictures with a device other than "CamHi"

- The captured picture data can only be confirmed with the app in this state. Use the following method to save the picture on the smartphone or tablet (device).

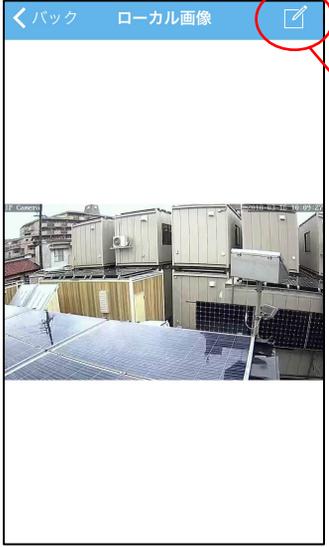

- Open the picture to be saved on the device.
- Tap the memo icon at the upper right.




- Tap Save.

- The picture can be confirmed with the device's photo app.




- The picture appears in the "Photos" app.

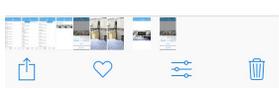

(6) Saving video in the G-cam unit.

- The images viewed with the smartphone or tablet can be recorded.
- The captured video can be stored in the D+CUBE unit. (Communication is established with the device during recording.)

Recording the video

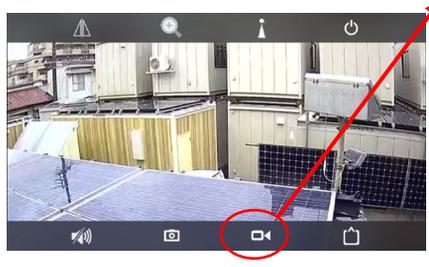

- Tap the movie cam icon.



- “録画” appears on the upper right corner. The images are recorded only while the app is running. (The recording stops when the app is closed or the screen is returned to the Home screen.)

Confirming captured data



- Tap the “Video” icon. Tap “Local” at the upper right and select the camera used to capture the data. (In this example, a picture from the Headquarters camera will be confirmed.)



- Tap “Recordings” and select the data for the time to be viewed.



- The video will play back.


(7) Playing data recorded in the camera.

- Use the following method to play data recorded in the G-cam unit. Data communication is established while reading the recorded data.

Confirming data saved on the camera




- Tap the “Video” icon. Tap “Online”.

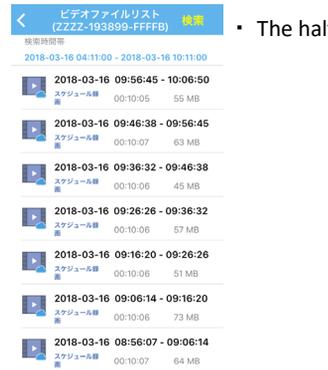

- The half day's worth of data recorded in the G-cam unit can be confirmed.


* To confirm more of the recorded data:

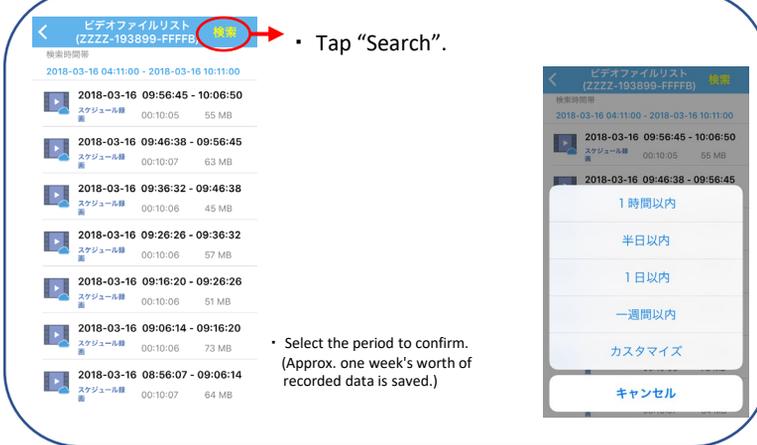

- Tap “Search”.

- Select the period to confirm. (Approx. one week's worth of recorded data is saved.)

Confirming the video immediately

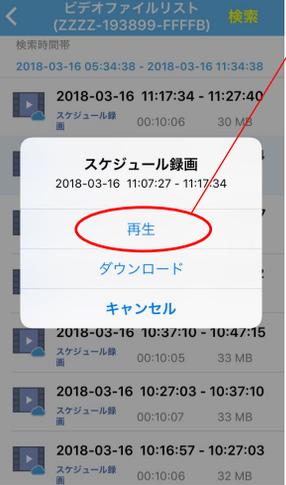

- Select the item to be confirmed and tap “Play”.

- The selected data will play back.




* Communication is established when playing online or downloading data.

Since the data stored in the camera is read and played back on a smartphone or other device, communication is established each time the data is checked. Make sure to use a Wi-Fi environment when confirming the data.

• Saving video in the device before playing



• Tap "Download".
In a few moments, downloading of the "Download" item under "Local" will start.

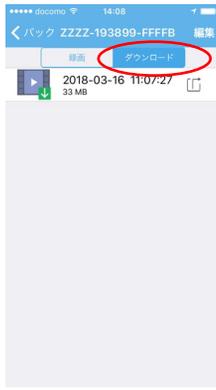

• When the downloaded data is tapped, the playback will start.



• Moving downloaded and saved videos to the device


• The downloaded videos can only be played within the "CamHi" app.
Use the following method to confirm the videos on an app other than "CamHi".




• Tap the "Video" icon.
Tap "Local".



• Select the data to be confirmed.

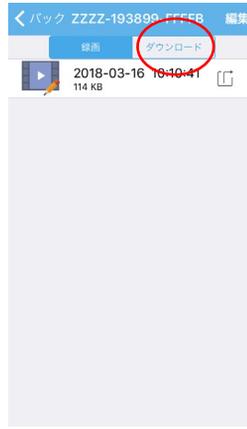

• Tap "Download".

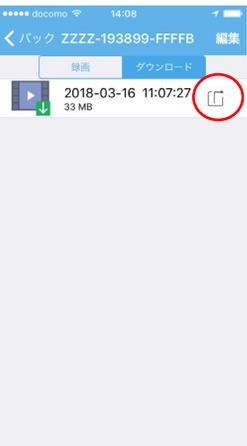

• Select the " " icon for the item to be downloaded.



• Tap "OK".



Confirming with a "Photos" app



• The saving process is completed.

(8) Other functions

• Here explaining how to change password and how to delete SD card in G-cam.

• Changing the password



• Tap the "Camera" icon.
Tap the " " icon for the item for which the password is to be changed.



• Tap the "パスワード変更".



• Input the current password in the field of "旧パスワード", the new password in the field of "新パスワード", and the new password again in the field of "パスワードを確認します".

• After inputting the password, tap "Apply".

* Notice

• If the password has been changed, please return the password to the original password when returning the D+CUBE unit.

▪ Deleting data saved on the G-cam.

- Tap the "Camera" icon.
- Tap the " " icon for the item to be deleted.



- Tap "SDカード設定".



- Tap "Format SD Card".



- Select "Yes".

* When "Yes" is selected, the data will be deleted.



- The SD Card will be formatted.


▪ The camera video appears blurry.

(4)-1 Try the procedures below when the picture/video is blurry while zooming/focusing




Adjust the focus by zooming or focusing

Tap the screen to display the menu.

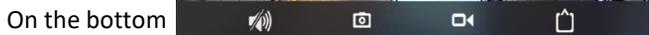

← Tap this icon. Then the small menu shown on the right will appear.

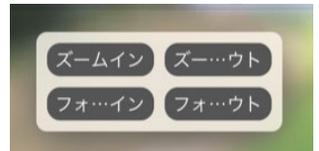

Adjust the focus by zooming (in/out) or focusing (in/out).



Once the focus is found, the adjustment is complete.